



WR15 WR12 WR10 WR08 WR06 WR05 WR03 WR02.2

**S02.2MS Series**  
**WR02.2 Frequency Extension Modules**  
**325 to 500 GHz**

**DESCRIPTION**

The S02.2MS Series will expand your existing microwave Signal Generator capabilities to conduct measurements in WR-02.2 (325-500 GHz). These frequency extension modules easily connect to the output of a signal generator providing a high performance source for DUT characterization activities. Characterize the DUT with the confidence that it will produce accurate results with superior performance of output power, spurious and harmonics. Specialized part numbers are available to avoid using an external power supply.



**HIGHLIGHTS**

- Modular design
- High Output Power of -25 dBm
- Microwave synthesizer determines frequency accuracy and resolution
- Phase noise adheres to 20 log (n) degradation
- Adjustable Height Control
- Optional power supply configuration for PSG
- Full continuous waveguide band coverage
- RoHS compliant

**APPLICATIONS**

- Maximum power with close proximity connections
- Ample power for most test conditions
- Precise setting of mm-wave frequencies
- Spectral purity enables phase noise measurements
- Convenient connections to DUT on test benches
- Simplify setup by using synthesizer as power supply
- Flexibility to handle multiple applications
- Environmentally friendly

**ELECTRICAL AND PERFORMANCE SPECIFICATIONS (+25°C)**



After a 0.5 hour warm-up period, the S02.2MS module will satisfy the following specifications.

Electrical Characteristics <sup>1</sup>	MIN	TYP	MAX
System Operating Frequency	325	--	500
RF out (dBm) typ. <sup>2</sup>	-28	-22	-15
RF in VSWR	--	≤ 2.0	--
RF out VSWR	--	≤ 3.0	--
Operating Temperature Range	+20° C	+25° C	+30° C

Module Characteristics <sup>1</sup>	Description
Test Port, System Output Interface <sup>3</sup>	WR-2.2
RF System Input	SMA(f)
RF Input Frequency	10.8 to 16.7 GHz
RF Input Power	+10 dBm ± 1.5 dB
RF Input Damage Level	+20 dBm
RF Multiply Factor	x30
DC (+12 VDC) Power Requirements	+1.5 A, typ.
Size (L x W x H) <sup>4</sup>	5.33" × 4.25" × 2.70"
Weight	< 2 lbs

<sup>1</sup> Specifications are typical and subject to change without notice

<sup>2</sup> As there are no internationally recognized power standards above 110 GHz, any power data supplied above 110 GHz is traceable only to OML's Calorimeter


<sup>3</sup> Test Port Flange Configuration is compatible with MIL-DTL-3922/67D (UG387/U-M)

<sup>4</sup> Height excludes the adjustable rubber feet length and depth dimension excludes the output waveguide length



### TYPICAL PERFORMANCE

The following typical performance is possible with the S02.2MS Series modules.

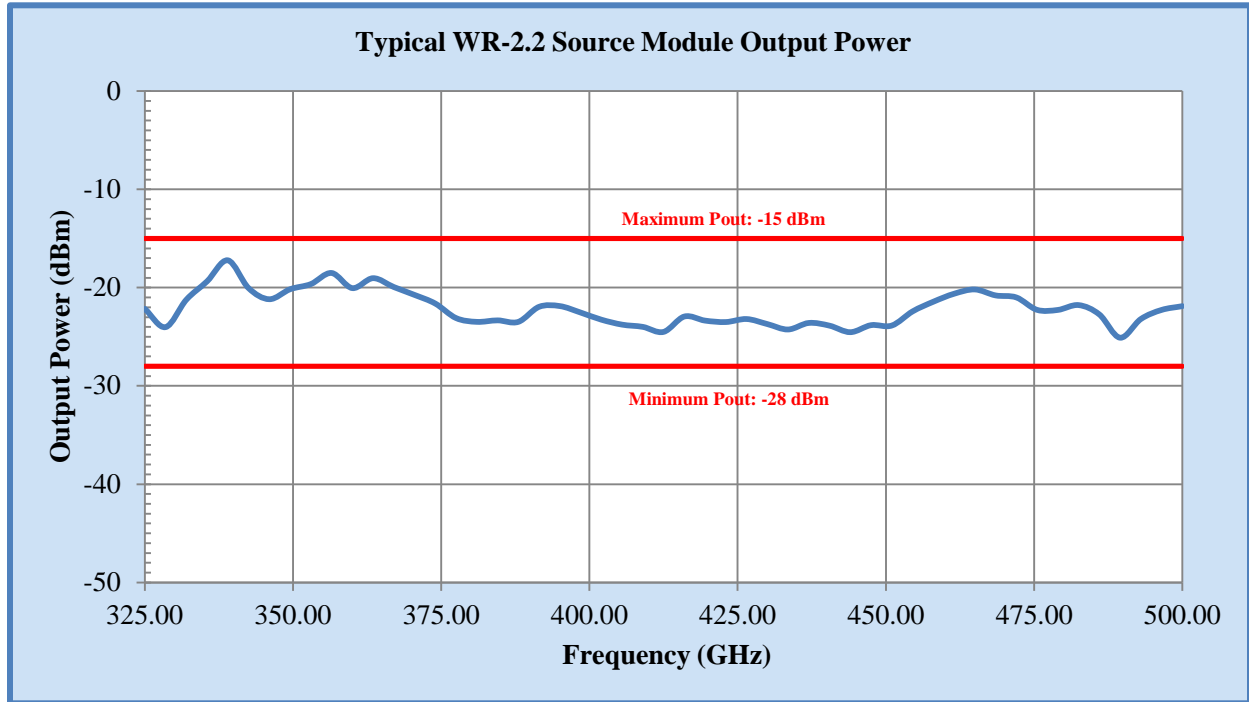

### ORDER INFORMATION

Model	Description
S02.2MS	WR-02.2 Source Module Accessories: DC power cable, Dual Banana Plug to 7 Pin Circular Bayonet Plug (V00DCBC1)
S02.2MS-AG	WR-02.2 Source Module, Option AG (Keysight DC power cable) Accessories: DC power cable (V00DCDC2), RF Cable SMA (m/m) (V00LOIF)

### MECHANICAL DIMENSIONS (If necessary, contact OML for more detailed drawings)

