



DESCRIPTION

The S04MS Series will expand your existing microwave Signal Generator capabilities to conduct measurements in WR-04 (170-260 GHz). These frequency extension modules easily connect to the output of your signal generator so you have a high performance source for your DUT characterization activities. Characterize your DUT with the confidence that the superior performance in terms of output power, spurious, and harmonics will product accurate results. Specialized part numbers are available to avoid using an external power supply.



HIGHLIGHTS

- Modular design
- Output Power of -16 dBm
- Microwave synthesizer determines frequency accuracy and resolution
- Phase noise adheres to 20 log (n) degradation
- Adjustable Height Control
- Optional power supply configurations
- Full continuous waveguide band coverage
- RoHS compliant

APPLICATIONS

- Maximum power with close proximity connections
- Ample power for most test conditions
- Precise setting of mm-wave frequencies
- Spectral purity enables phase noise measurements
- Convenient connections to DUT on test benches
- Simplify setup by using synthesizer as power supply
- Flexibility to handle multiple applications
- Environmentally friendly

ELECTRICAL AND PERFORMANCE SPECIFICATIONS (+25°C)

After a 0.5 hour warm-up period, the S04MS module will satisfy the following specifications.

Electrical Characteristics¹	MIN	TYP	MAX
System Operating Frequency	170	--	260
RF out (dBm) typ. ²	-22	-16	-12
Higher order output harmonics (dBc) typ. ³	--	< -20	--
In-Band Spurious (dBc) typ. ⁴	--	≤ -20	--
RF in VSWR	--	≤ 2.0	--
RF out VSWR	--	---	--
Operating Temperature Range	+20° C	+25° C	+30° C

Module Characteristics¹	Description
Test Port, System Output Interface ⁵	WR-04
RF System Input	SMA(f)
RF Input Frequency	9.4 to 14.5 GHz
RF Input Power	+10 dBm ± 1.5 dB
RF Input Damage Level	20 dBm
RF Multiply Factor	x18
DC (+12 VDC) Power Requirements	1.5 A max
Size (L x W x H) ⁶	5.33"x 4.25" x 2.7" (135.4 mm x 108.0 mm x 68.6 mm)
Weight	≤ 2 lbs (0.9 kg)

¹ Specifications are typical and subject to change without notice

² As there are no internationally recognized power standards above 110 GHz, any power data supplied above 110 GHz is traceable only to OML's Calorimeter

³ As relates to the desired output frequencies. Applicable only with Agilent PSG & 8360 series synthesizers and Anritsu MG36xx, 68xxx/69xxx & 67xx series synthesizers.

⁴ In-band mixing products. Typically ≤ -15 dBc in the lower 10% of the waveguide band. Applicable only with Agilent PSG & 8360 series synthesizers and Anritsu MG36xx, 68xxx/69xxx & 67xx series synthesizers.


⁵ Test Port Flange Configuration is compatible with MIL-DTL-3922/67E (UG387/U-M)

⁶ Height excludes the adjustable rubber feet length and depth dimension excludes the output waveguide length



TYPICAL PERFORMANCE

The following typical performance is possible with the S04MS Series modules.

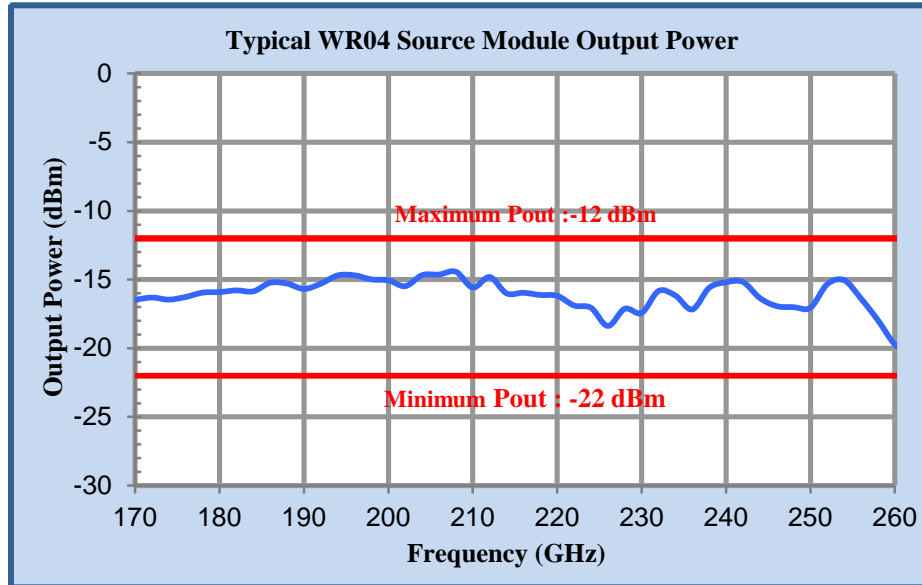

ORDER INFORMATION

Model	Description
S04MS	WR-04 Source Module Accessories: DC power cable, Dual Banana Plug to 7 Pin Circular Bayonet Plug (V00DCBC1)
S04MS-AG	WR-04 Source Module, Option AG (Key sight DC power cable) Accessories: DC power cable (V00DCDC2), RF Cable SMA (m/m) (V00LOIF)

Option	
Option -A	Adds 0 to 25 dB Manual Adjustable Attenuator to the RF Path

Standard Accessories	
V00DCBC11	Dual Banana Plug to 7 Pin Circular Bayonet Plug DC power cable, 3 ft
VDCPW12-51	DC Power Supply (7-Pin Output Circular Jack & US AC Power Cord), 12VDC 5A Output.
V00DCDC22	D connector plug to 7 pin Circular Bayonet Plug DC power cable, 6 ft (Keysight PSG series with "Source module interface" output)
VDCPW09-43	DC Power Supply (7-Pin Output Circular Jack & US AC Power Cord), 9VDC 4.5A Output.
V00LOIF	Test Port Ext. Cable, DC to 18 GHz, 3 ft, SMA(m) - SMA(m), 50 Ohm

¹ Applicable to SxxMS models only

² Applicable to SxxMS-AG models only

³ Required for Keysight PSG series signal generator **without** "Source module interface" output to energize OML source module



MECHANICAL DIMENSIONS (If necessary, contact OML for more detailed drawings)

